




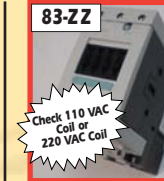


Group 83 "C" Contactors 3 Phase















State Coil Voltage
- 110 VAC
- 220 VAC
Motor Starters

Primary Main
Press Voltage
Coil Voltage is
usually half






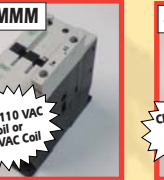
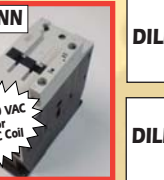
Siemens - 3 Phase Latest Version

 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-UU</p> <p>3RT1016</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-VV</p> <p>3RT1023</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-WW</p> <p>3RT1026</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-XX</p> <p>3RT1035</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-YY</p> <p>3RT1036</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-ZZ</p> <p>3RT1045</p>	<p>83-AAA</p> <p>Call For Other Siemens Contactors</p> <p>3RT1054</p>
---	--	--	--	---	--	--

Siemens 3 Phase Contactors - Later

 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-A</p> <p>3TF-40</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-B</p> <p>3TF-41</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-C</p> <p>3TF-43</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-BBB</p> <p>3TF-44</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-D</p> <p>3TF-46</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-CCC</p> <p>3TF-48</p>	 <p>Note: 24VDC</p> <p>83-DDD</p> <p>3TF20-10 24VDC</p>
 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-E</p> <p>3TB-40</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-F</p> <p>3TB-41</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-G</p> <p>3TB-43</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-EEE</p> <p>3TB-44</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-H</p> <p>3TB-46</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-FFF</p> <p>3TB-48</p>	 <p>Note: 24VDC</p> <p>83-GGG</p> <p>3TB43 24VDC</p>

Klockner Moeller - Latest Type

 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-HHH</p> <p>DILM-9</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-III</p> <p>DILM-12</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-JJJ</p> <p>DILM-17</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-KKK</p> <p>DILM-25</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-LLL</p> <p>DILM-32</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-MMM</p> <p>DILM-40</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-NNN</p> <p>DILM-50</p>	<p>DILM-65</p> <p>DILM-80</p>
---	---	---	---	--	---	---	-------------------------------

Klockner Moeller - Later Type

 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-I</p> <p>DIL OOM</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-J</p> <p>DIL OAM</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-K</p> <p>DIL 1M</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-000</p> <p>DIL 1AM</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-L</p> <p>DIL 2M</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-PPP</p> <p>DIL 2AM</p>	 <p>Check 110 VAC Coil or 220 VAC Coil</p> <p>83-M</p> <p>DIL 0-11</p>
--	---	--	---	---	---	--


Below helps to determine press main voltage - especially Secondary Coil Voltage for above




To Note Your Voltage

- 600
- 415
- 380
- 230
- 208

Voltage @ Wall Disconnect

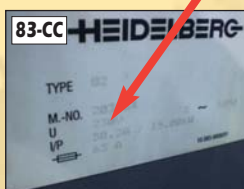

HBG Plaque @ Feeder Electric Panel states secondary Voltage

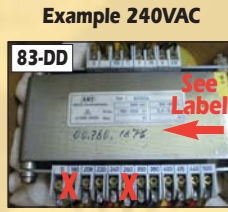


Example 240VAC

2 - Input Tap Wires determines secondary Voltage



3 Shunts on most as shown up and down for lower Voltage. Typically 110vac or 230vac

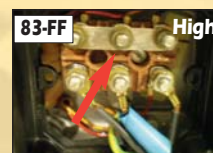

Shunts across 3 posts on most 3 phase motors. Typically 220vac or 380vac

Call For Contactors Not Listed